


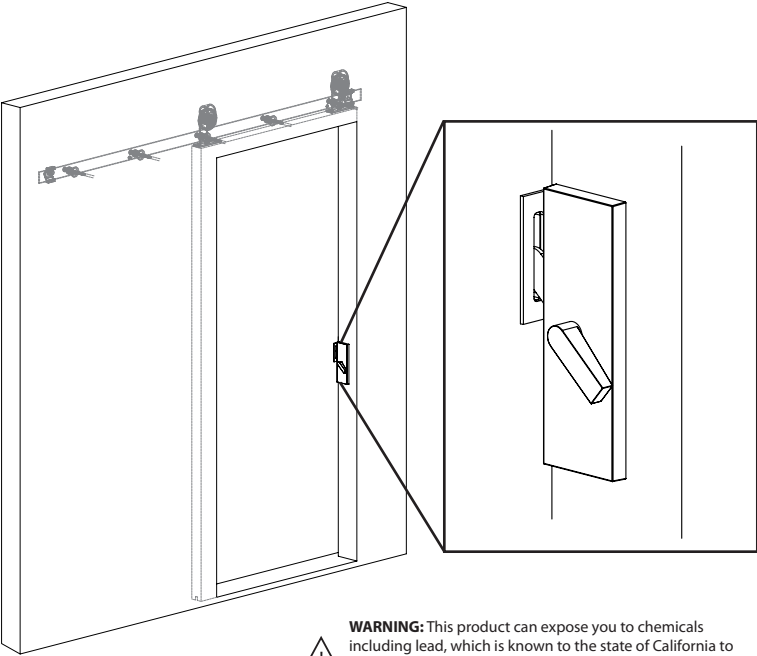

1. Door Prep

7 7/8"

2 3/4"

Ø13/64 THRU (OPTIONAL FOR EGRESS)

3/8"

JAMB FACE

3/8" R MAX TYP

Use door template to prep the door

2. Install Strike

Diagram showing the strike being inserted into the door and secured with screws.

3. Install Mounting Base

Door Jamb

3/8" - 3/4"

1/8"

4. Install Lock Body

Diagram showing the lock body being inserted into the door and secured with screws.

OPTIONAL FOR EGRESS

Sliding Door

Insert egress pin to unlatch door

Outside

Inside

Outside

Inside